

Veranda Fixed Roof
Winter Garden System

REAL PERGO








+359 898459262
+359 898459257
www.realpergo.bg
sitimbild2020@gmail.com
@realpergo.bg
@realpergo.bg


REAL PERGO

Veranda Fixed Roof


Profile Sections

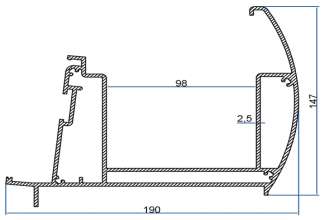


Profile No	kg/m
VRND-1801	5,72

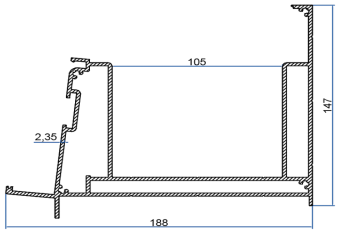


Profile No	kg/m
VRND-1815	5,5

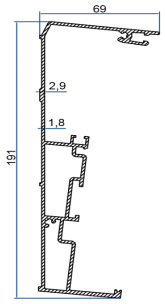


Profile No	kg/m
VRND-1802	2,7

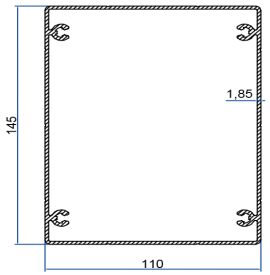


Profile No	kg/m
VRND-1804	3,3




Profile No	kg/m
VRND-1812	0,22




Profile No	kg/m
VRND-1810	0,33

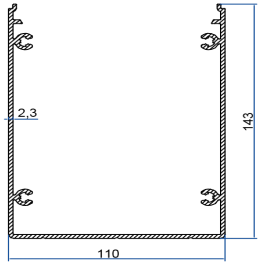


Profile No	kg/m
VRND-1805	3,1




Profile No	kg/m
VRND-1806	,93

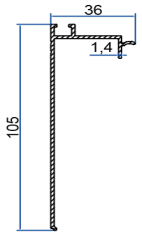


Profile No	kg/m
VRND-1803	,62




Profile No	kg/m
VRND-1818	,45




Profile No	kg/m
VRND-1811	0,44

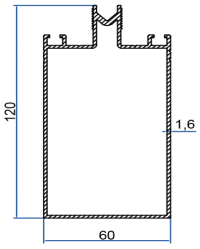


Profile No	kg/m
VRND-1807	1,88

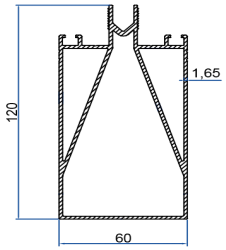


Profile No	kg/m
VRND-1808	2,49

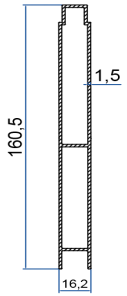

Profile No	kg/m
VRND-1814	1,49

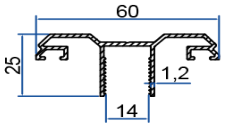


Profile No	kg/m
VRND-1809	0,56



Profile No	kg/m
VRND-1813	0,31

Veranda Fixed Roof


Profiles

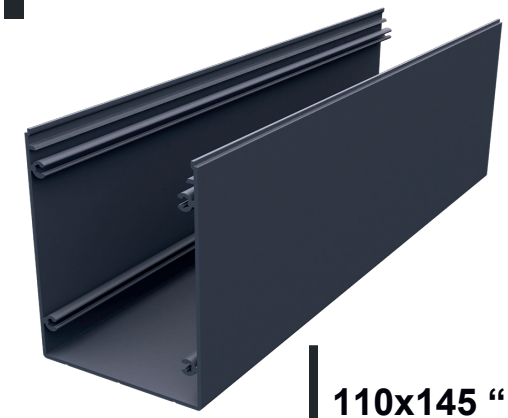

110x145 “U” Post Profile

Product Code: VRND-1805

Weight kg/m: 3,1
(143 x 110 x 2,3mm)

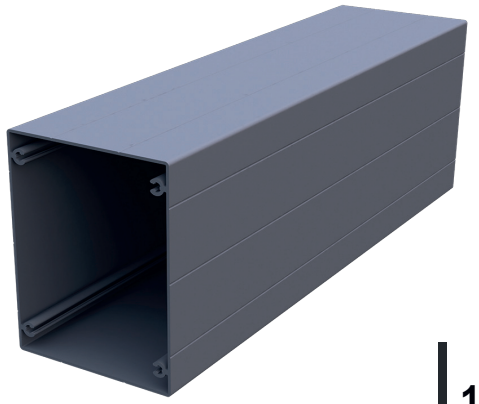

110x145 Post Profile

Product Code: VRND-1804


Weight kg/m: 3,27
(145 x 110 x 1,85mm)



110x145 Post Cover Profile

Product Code: VRND-1806

Weight kg/m: 0,93
(145 x 110 x 1,8mm)

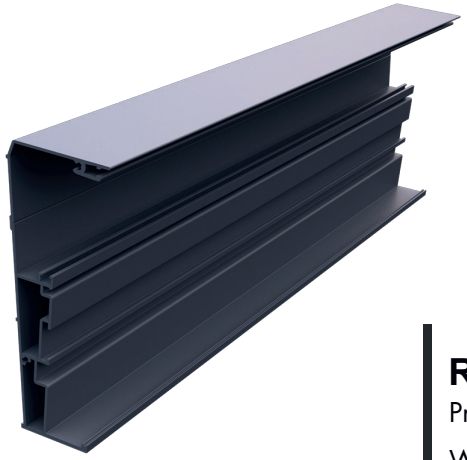

Rear Mounting Profile

Product Code: VRND-1802


Weight kg/m: 2,7

(191 x 69 x 1,8mm)

+359 898459262
+359 898459257
www.realpergo.bg
sitimbild2020@gmail.com
@realpergo.bg
@realpergo.bg

Veranda Fixed Roof

Profiles

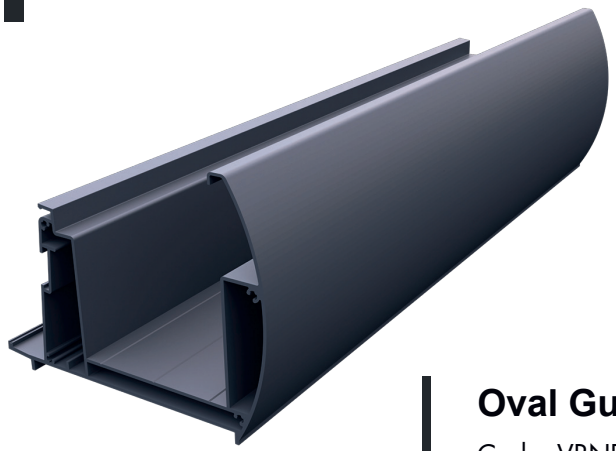


Oval Gutter Profile

Code: VRND-1801

Weight kg/m: 5,72

(147 x 190 x 2,5mm)

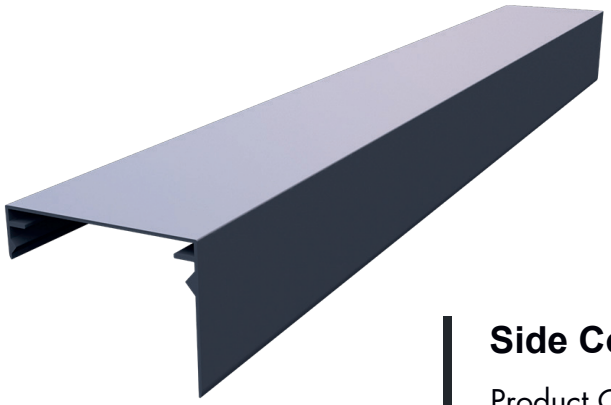

Side Cover Profile

Product Code: VRND-1811

Weight kg/m: 0,44

(45x63x 1 mm)



Plain Gutter Profile

Product Code: VRND-1815

Weight kg/m: 5,5

(147 x 188 x 2,35mm)



Middle Cover Profile

Product Code: VRND-1810

Weight kg/m: 0,33

(16 x 62 x 1mm)


Veranda Fixed Roof

Profiles



Pressure Profile

Product Code: VRND-1809
Weight kg/ m:0,56
(25 x 60 x 1,2mm)

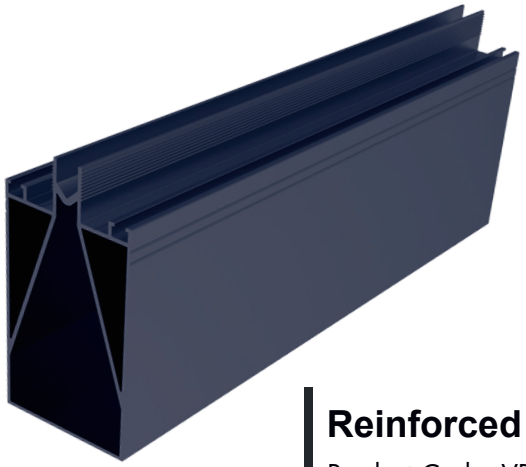

Reinforced Carrier Profile

Product Code: VRND-1808
Weight kg/m: 2,49
(120 x 60 x 1,65mm)



Carrier Profile

Product Code: VRND-1807
Weight kg/m: 1,88
(120 x 60 x 1,6mm)



Oluk Ve Arka İç Kapak Profili

Product Code: VRND-1803
Weight kg/m: 0,62

+359 898459262
+359 898459257
www.realpergo.bg
sitimbild2020@gmail.com
@realpergo.bg
@realpergo.bg

Veranda Fixed Roof

Profiles




15 x 160 Panelling

Code: VRND-1814

Weight kg/m : 1,49

(160 x 16 x 1,6mm)

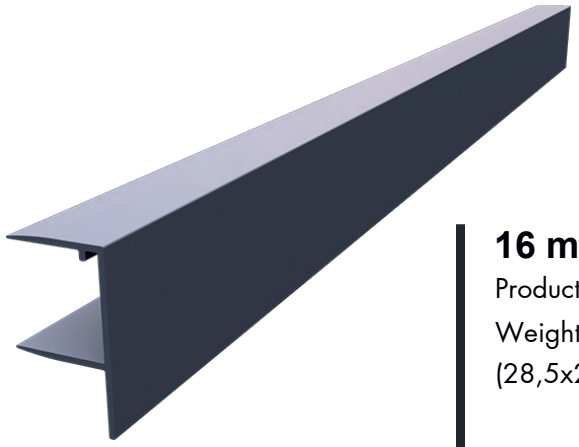

16 mm “F” Profile

Product Code: VRND-1812


Weight kg/m: 0,22

(28,5x26x 1 mm)

16 mm “H” Profile


Product Code: VRND-1813

Weight kg/m: 0,31

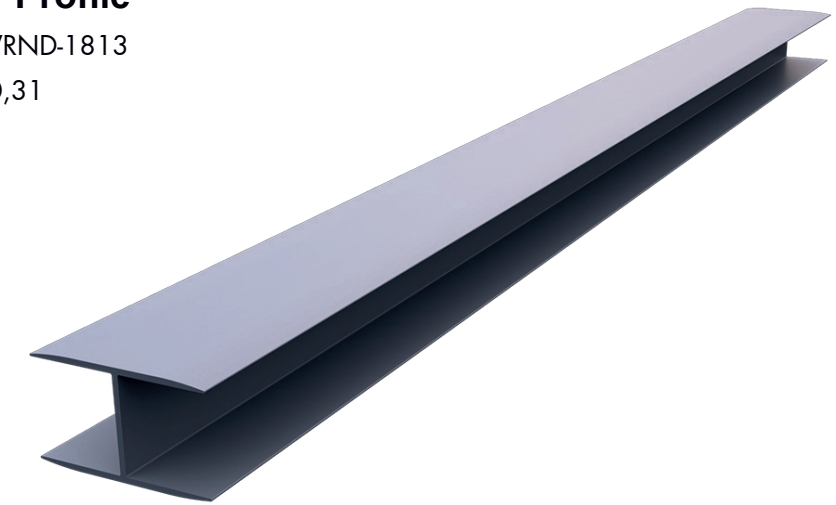


Veranda Fixed Roof

Accessories

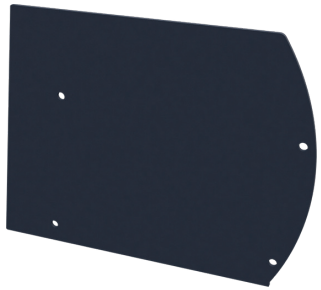

Sheet Metal Cover of the Oval Gutter Cover
Product Code: VRND-2005

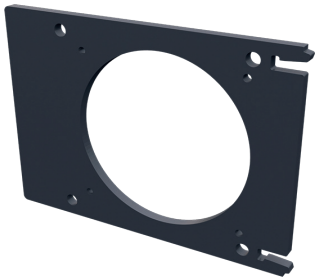


Top Joint Metal Sheet of the "U" Post
Product Code: VRND-2010



Sheet Metal Cover of the Oval Gutter Cover
Product Code: VRND-2016



Sheet Metal Cover of the Rear Mounting Profile
Product Code: VRND-2004

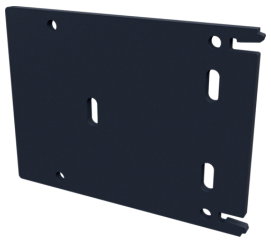

Bottom Joint Metal Sheet of the "U" Post
Product Code: VRND-2009



Bottom Joint Metal Sheet of the 110x145Post
Product Code: VRND-2008

+359 898459262
+359 898459257
www.realpergo.bg
sitimbild2020@gmail.com
@realpergo.bg
@realpergo.bg
REAL PERGO

Veranda Fixed Roof

Accessories



110 x 145 Bottom Lug

Product Code: VRND-2007



Metal Assembly Sheet of Glazing Bar

Product Code: VRND-2006



EPDM for Pressure Bearing Profile

Product Code: VRND-2002



EPDM for Rear Mounting Profile

Product Code: VRND-2003

Veranda Fixed Roof

Accessories



24V / 5A LED Transformer

Product Code: VRND-2015



75 mm Filtre

Product Code: VRND-2001




24VSpotlight Black

Product Code: VRND-2011



24VSpotlight White

Product Code: VRND-2012

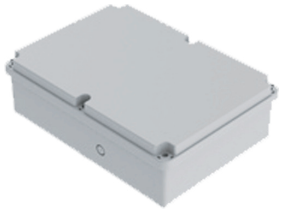

LED Control Module

Product Code: VRND-2013




2 x 0.75 LED Cable (Copper)

Product Code: VRND-2014

+359 898459262
+359 898459257
www.realpergo.bg
sitimbild2020@gmail.com
@realpergo.bg
@realpergo.bg

Veranda Fixed Roof



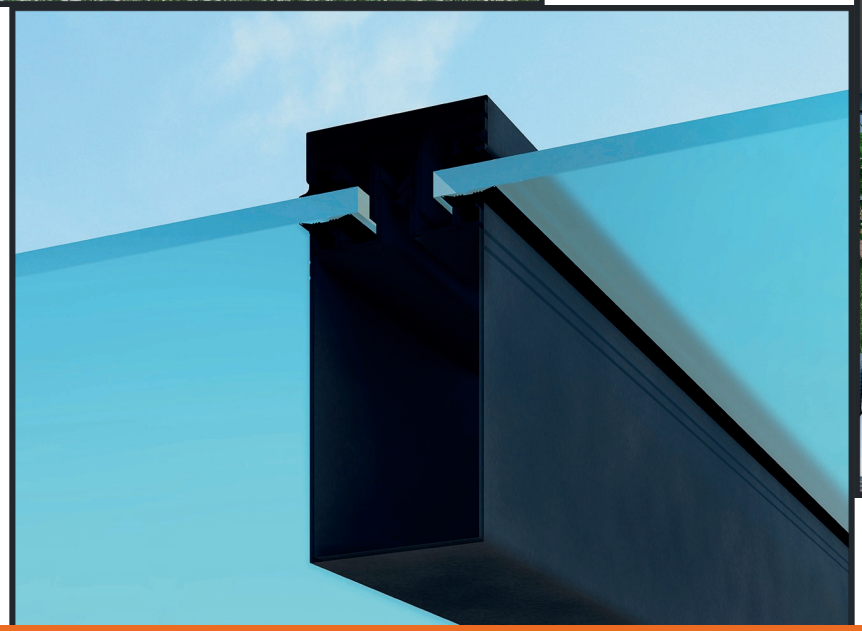






+359 898459262
+359 898459257
www.realpergo.bg
sitimbild2020@gmail.com
@realpergo.bg
@realpergo.bg

REAL PERGO

Veranda Fixed Roof

Assembly

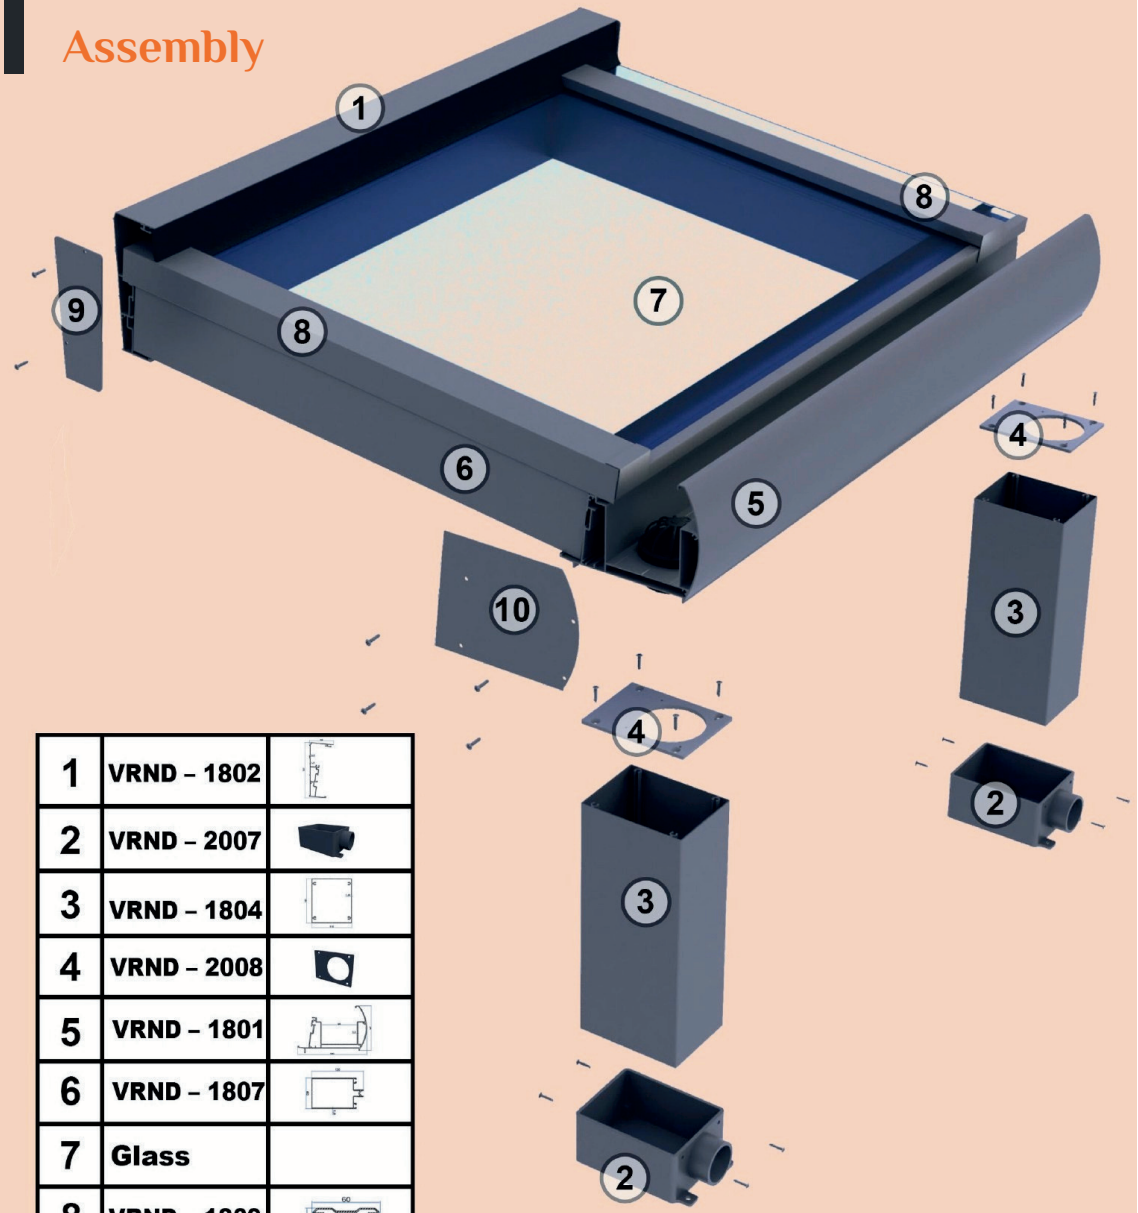

1	VRND – 1802	
2	VRND – 2007	
3	VRND – 1804	
4	VRND – 2008	
5	VRND – 1801	
6	VRND – 1807	
7	Glass	
8	VRND – 1809	
9	VRND – 2004	
10	VRND – 2005	



Veranda Fixed Roof

Assembly

Before starting the installation, make sure to define the installation area according to the previous measurements and prepare all the necessary tools for the product assembly.

1- Install the product code VRND – 1802 Arka Askı Profili (Back Hanger Profile) on the designated wall (according to the measurements).

Installing the Bases:

2- Install the product Alt Pabuç - VRND-2007 on the measured ground.

3- Place the Dikme Profili – VRND – 1804 inside the Alt Pabuç and tighten the screws.

4- Attach the Dikme Üst Bağlantı Sacı – VRND – 2008 piece to the top of the post. Installing the Gutter:

5- Install the Oval Oluk Profili – VRND – 1801 on top of the posts as shown in the image. Placing the Glass:

6- Attach the Cam Kayıt Profili – VRND 1807 to the VRND – 1802 Arka Askı Profili, which you have already mounted on the wall, and the Oval Oluk Profili – VRND – 1801 using the Cam Kayıt Bağlantı Sacı – VRND – 2006, as shown in the image. Repeat this process based on the number and placement of the glass panels.

7- Place the first glass in its position.

8- Place the Baskı Profili – VRND – 1809 on top of the Cam Kayıt Profili – VRND - 1807 as shown in the image, ensuring that the glass is placed between them.


**** Repeat steps 7 and 8 for all the glass panels in sequence.**


9- Finally, place the caps as shown in the image.


+359 898459262
+359 898459257
www.realpergo.bg
sitimbild2020@gmail.com
@realpergo.bg
@realpergo.bg


Veranda Fixed Roof


Assembly

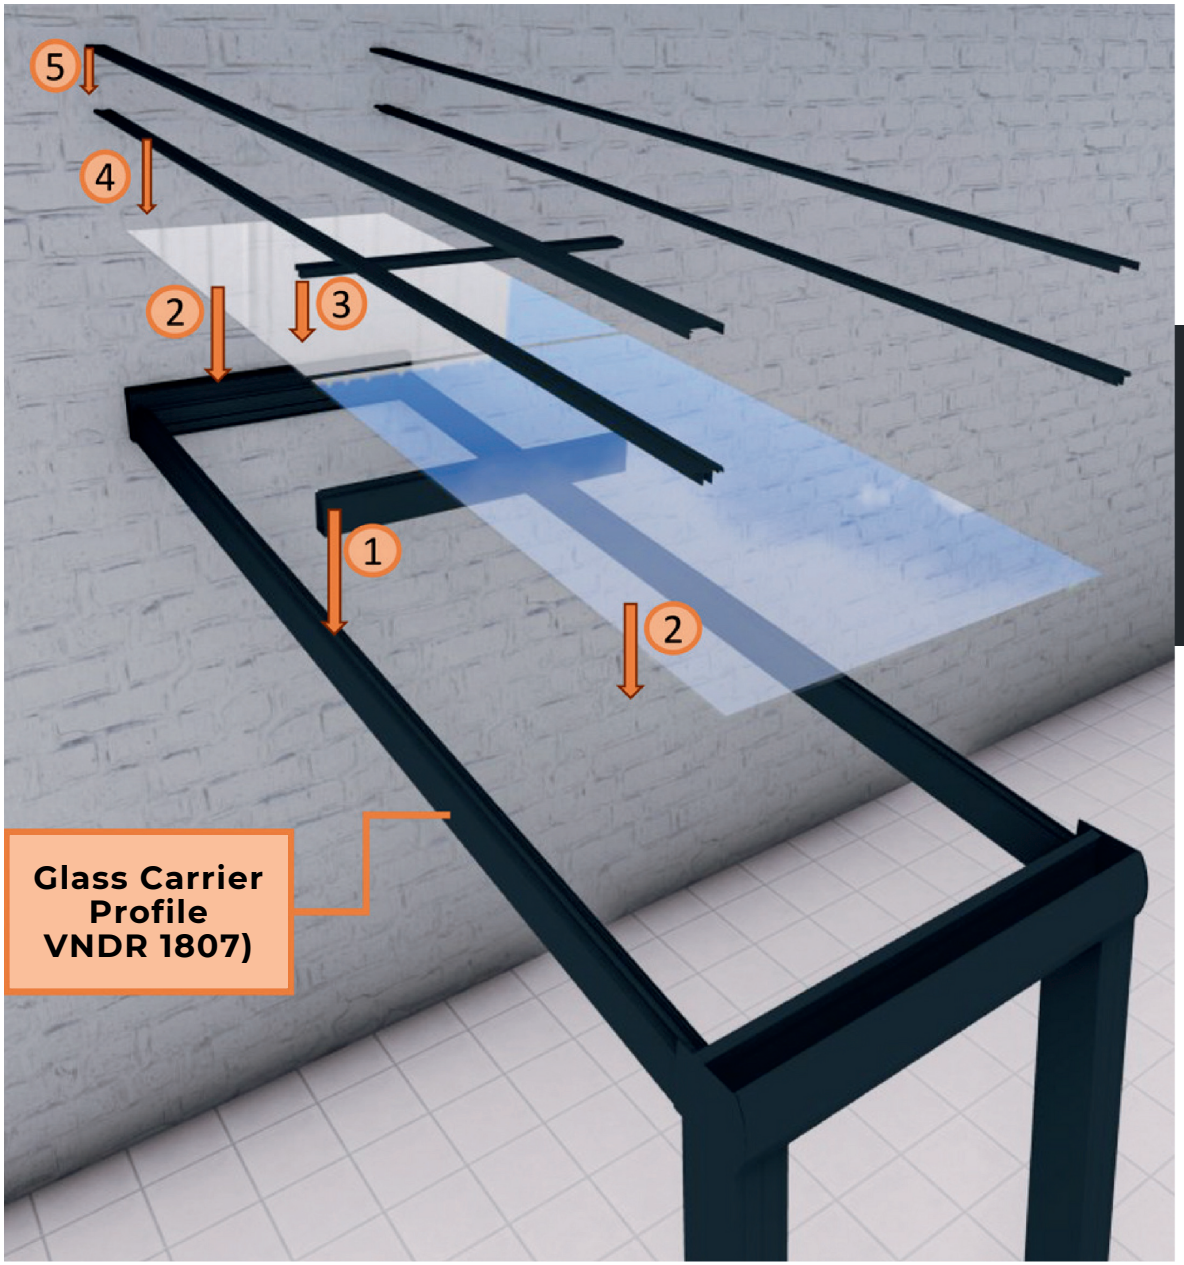

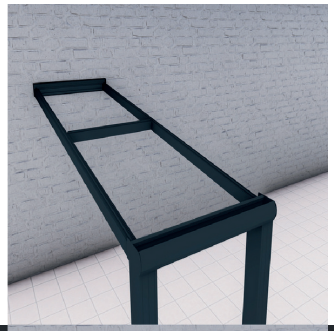

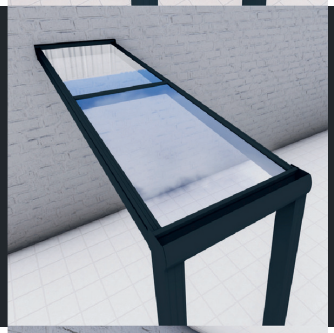

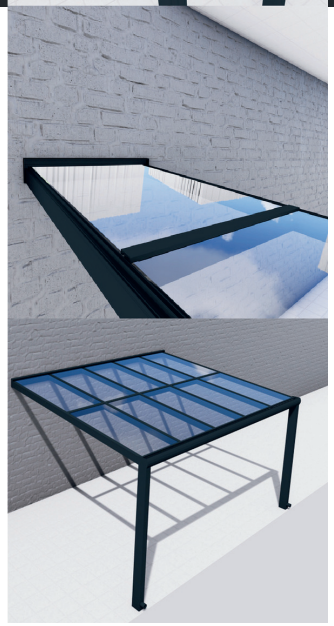

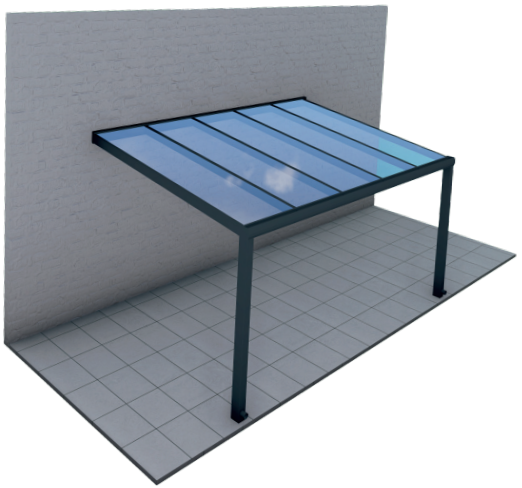

Veranda Fixed Roof

Assembly

**** If the depth of your space is more than 4 meters, the glass panels will not be in a single piece, and a CARRIER Profile will be placed between them. For assembly in this case, follow the steps below: (The CARRIER Profile is the CARRIER PROFILE – VRND 1807 cut into smaller sizes, placed vertically between the side CARRIER PROFILE – VRND 1807 profiles.)**

1-After completing step 6 and installing the CARRIER PROFILE – VRND 1807, place and install the CARRIER Profile between the CARRIER PROFILE – VRND 1807 profiles as shown in the image, according to the specified measurements.

2-Place the glass panels on top of the CARRIER PROFILE – VRND 1807.

3-Place and install the PRESSURE PROFILE – VRND – 1809 and the piece on top of the CARRIER onto the glass panels.

4-Repeat this process for all the glass panels.

5- Finally, place the caps as shown in the image.





+359 898459262
+359 898459257
www.realpergo.bg
sitimbild2020@gmail.com
@realpergo.bg
@realpergo.bg

REAL PERGO

Veranda Fixed Roof

Assembly

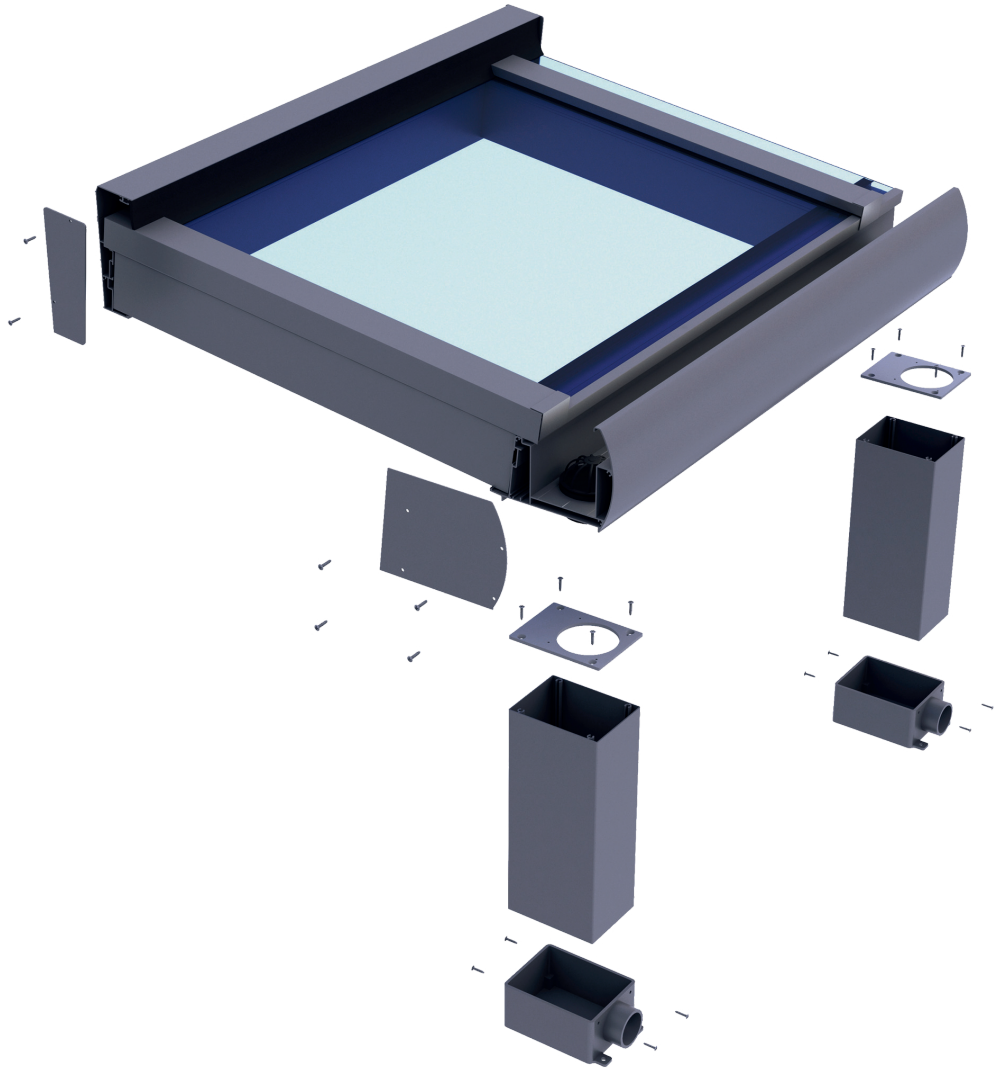

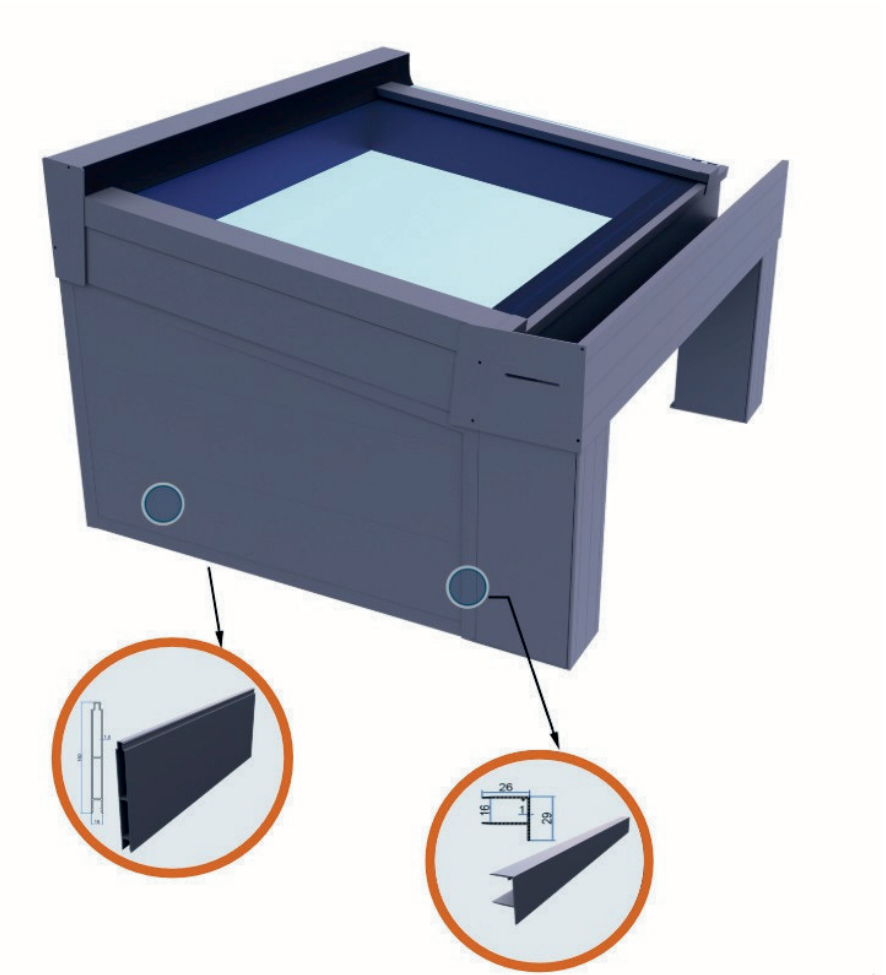

Veranda Fixed Roof

Glass Options





Insulating Glass

Minimum 8 mm - Maximum 26 mm



Lamine Cam

Laminated Glass Minimum 8 mm - Maximum 10 mm


Temperli Cam

Tempered Glass Minimum 8 mm - Maximum 10 mm



Polycarbonate

Minimum 8 mm - Maximum 16 mm

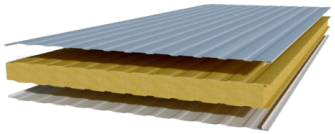

Sandviçceb he panel

Sandwich Façade panel

40 mm

+359 898459262
+359 898459257
www.realpergo.bg
sitimbild2020@gmail.com
@realpergo.bg
@realpergo.bg

REAL PERGO


REAL PERGO


REAL PERGO

REAL PERGO

Veranda Winter Garden

Plovdiv Province, Byalata
Vodenitsa District19A,
4004 Plovdiv/Ring Road,
Markovo Village Junction

+359 898459262
+359 898459257

www.realpergo.bg
sitimbild2020@gmail.com

@realpergo.bg
@realpergo.bg